



ITEM DESCRIPTION	ORIGINAL PART NO.	PART NO.
Spindle initiator for Schlafhorst winding machine	8.85910027 8.85910028	IPS-MBLT10-PO20W02 IPS-MBLT10-PO20W02
Spindle initiator for Schlafhorst winding machine	8.85910012 8.85910016 8.85910030 8.85910032	IPS-MBLT10-NO20W02 IPS-MBLT10-NO20W02 IPS-MBLT10-NO20W02 IPS-MBLT10-NO20W02
Trumac Machine M18 x85 Connector Proxi Switch	1360 8220 5057	IPS-BBRF18-PO20C12
Block type DC inductive proximity for oyoda Ring Frame	RX 240	IPS-PBLF20-DO20W02
Trumac DK 740 carding machine	136082205028	IPS-BBRF08-PO20W02
Trumac DK 740 & DK 780 carding machine	136082205048	IPS-BBRF08-PO20C12
Trumac DK 740 carding machine (M12 sensor)	136082205032	IPS-BBRF12-PO20W02
Trumac DK 760 & DK 780 carding machine (M12 sensor)	136082205046	IPS-BBRF12-PO20C12
Trumac DK 740 carding machine (M18 sensor)	136082205020	IPS-BBRF18-PO20W02
Trumac DK 760 & DK 780 carding machine (M18 sensor)	136082205047	IPS-BBRF18-PO20C12
Cross Roll Carding machine (Sliver break sensor)	136082205040	PPS-BBRD18-ND30W02
TSN-D1 Sensing head sensor for SULZER PU Model	ZSD	L-Type (MS)
TSN-D2 Sensing head sensor for SULZER PU Model	VSD / SSD	D2-Type (MS)
TRUMAC Blow Room	136082205029	IPS-BBRN08-DNMUW02
SULZER Flight Tigger (Brass)	TW11	Flight Tigger (Brass)
SULZER Flight Tigger (Plastic)	ZSD /SSD/S &TW11	Flight Tigger (Plastic)
Projectile sensor for SULZER weaving machine	911-502-067 845-029-000	PFR PFR